# AW-CU427-USB

## IoT Connectivity Evaluation Board for AWS IoT Core

## Getting Started Guide

**Rev. 0.1**



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# Revision History

| Version | Revision Date | Description | Initials | Approved |
|---|---|---|---|---|
| 0.1 | 2021/01/14 | Initial version | Steven Jian<br>Jackson Boon<br>Josh Lin | Chihhao Liao<br>Patrick Lin |
| | | | | |



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# Table of Contents


**1. Overview of AW-CU427-USB ..... 4**

**2. Hardware Setup ..... 5**

2.1 Components ..... 5
2.2 Identify the Hardware and Firmware ..... 6
2.3 Antenna Installation Guide ..... 8

**3. AWS Command Example ..... 10**

3.1 Getting Started with AWS IoT Core ..... 10
3.2 Publish and Monitor MQTT message on the cloud ..... 14

**4. Block Diagram and Schematic ..... 16**

4.1 Block Diagram for AW-CU427-USB ..... 16
4.2 Schematics for AW-CU427-USB ..... 17

**5. Additional Information ..... 19**

**Appendix ..... 20**




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# 1. Overview of AW-CU427-USB

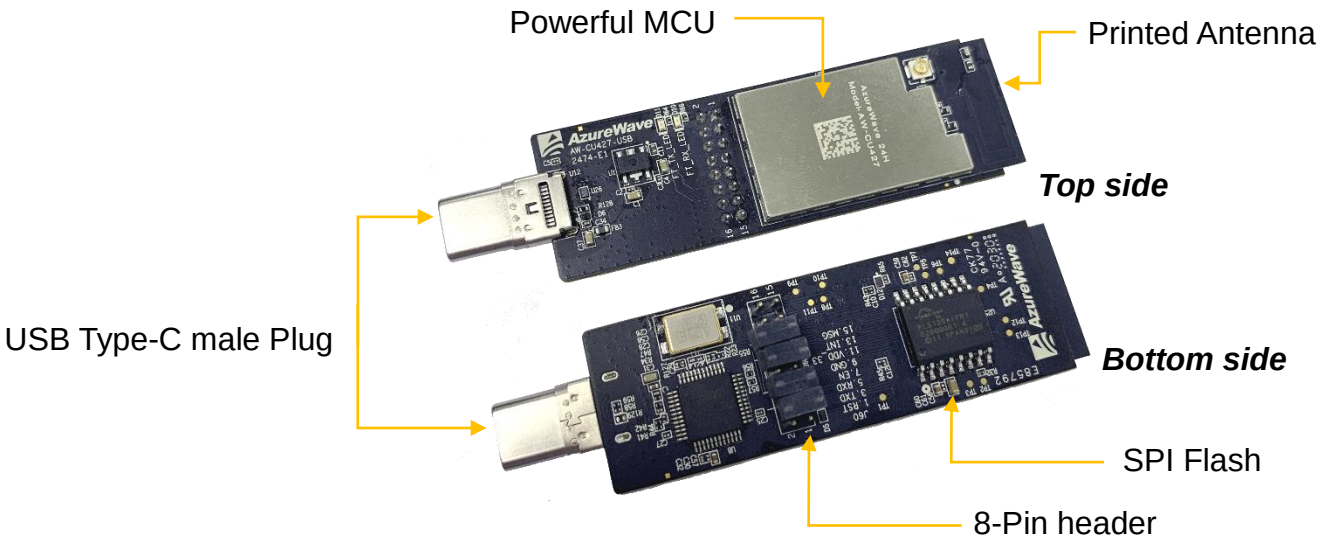




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# 2. Hardware Setup

## 2.1 Components

- Plug the AW-CU427-USB dongle into the USB type C port or through an USB type A male to USB type C female cable (not included in the box) if the computer does not have the USB type C port or it can not recognize the dongle

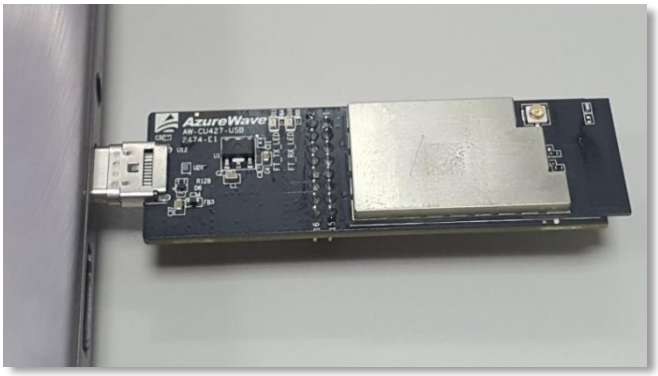

The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

## 2.2 Identify the Hardware and Firmware

- The simple way to identify the hardware and firmware of AW-CU427 is under Windows. You also can identify it under Linux.

  Check if Device Manager can recognize AW-CU427-USB. If not, download FTDI Driver at https://www.ftdichip.com/Drivers/VCP.htm, then send the AT commands through the second FTDI com port

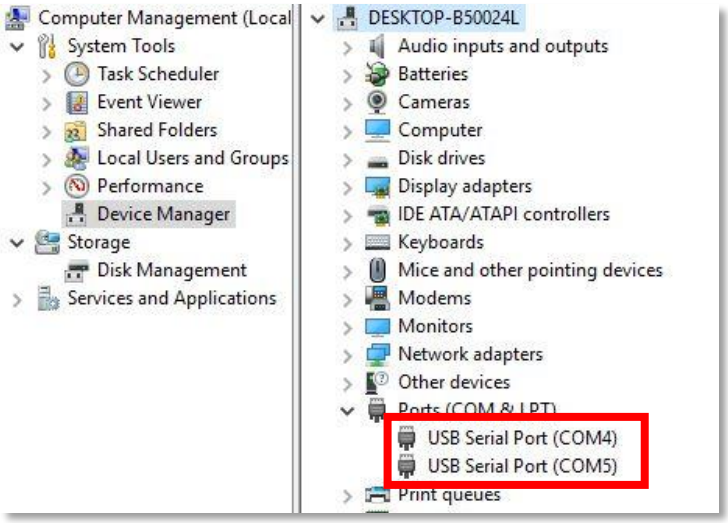


- Open a serial connection by using PuTTY or the similar terminal emulator

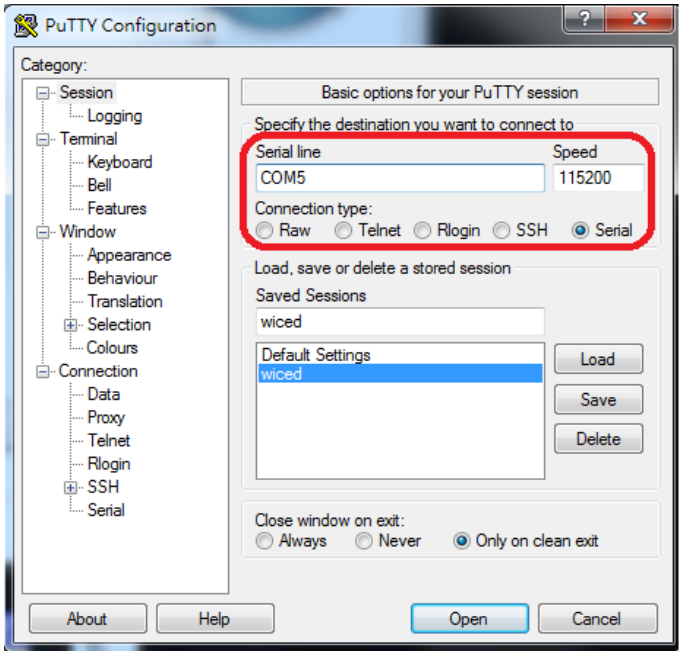




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

- To force the terminal show characters you type and send the command only after you hit the “Enter” key, set Local echo & Local line editing to “Force on”

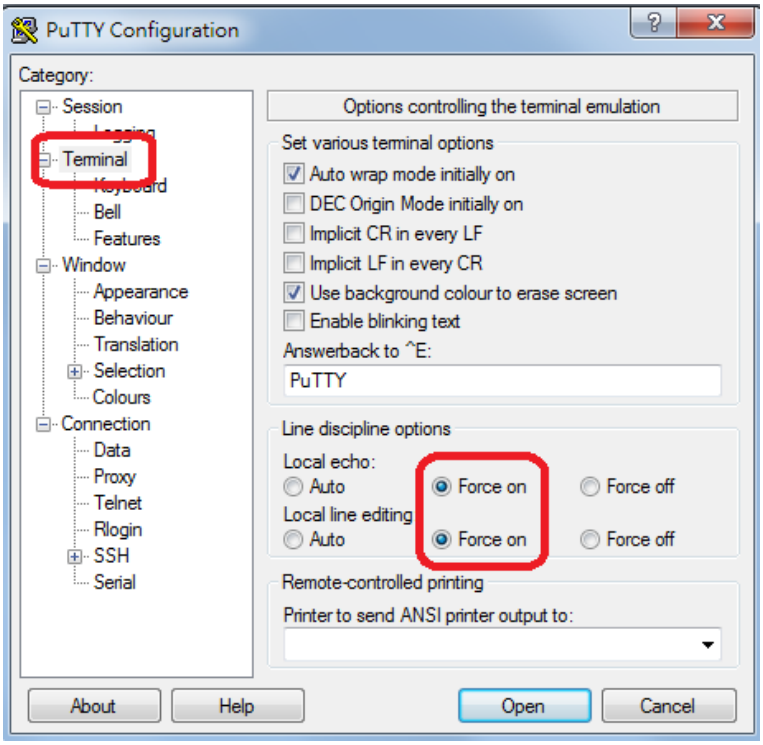


- Type **AT+MOD_About** and hit “Enter” key to identify the dongle hardware and firmware

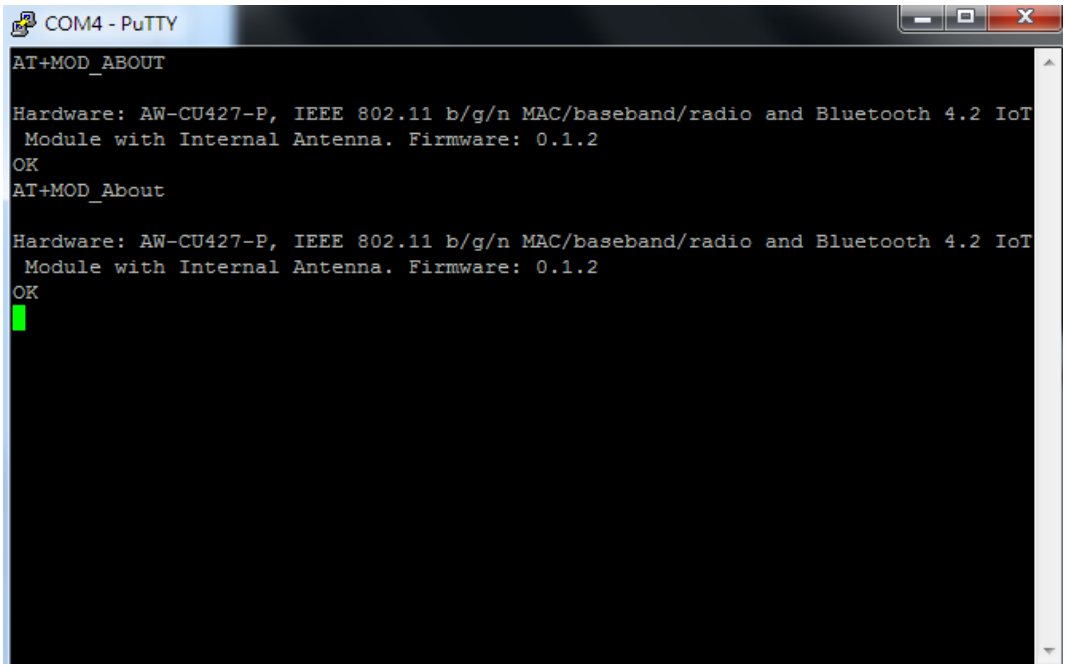
COM4 - PuTTY
AT+MOD_ABOUT
Hardware: AW-CU427-P, IEEE 802.11 b/g/n MAC/baseband/radio and Bluetooth 4.2 IoT
Module with Internal Antenna. Firmware: 0.1.2
OK
AT+MOD_About
Hardware: AW-CU427-P, IEEE 802.11 b/g/n MAC/baseband/radio and Bluetooth 4.2 IoT
Module with Internal Antenna. Firmware: 0.1.2
OK



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

## 2.3 Antenna Installation Guide

The AW-CU427-USB includes an integrated omnidirectional antenna. Hence, the dongle can be seen as an antenna.

Objects close to the antenna (the dongle) become new sources for radiation from far field perspective. This can be a problem if those objects are electrically large. Recommended minimum clearance is 20mm for conductive materials and 10mm for non-conductive materials. Failing to meet the clearance requirements will detune the antenna and the radiation pattern may not be omnidirectional.

Use AT command **AT+WIFI_On** and **AT+WIFI_Scan** to check if the RSSI (Received Signal Strength Indication) is good (>-65dBm) or not. If not, adjust the setup until the RSSI >-65dBm.

The examples below are antenna radiation patterns with different setups:

- Steel Desk & Chair + Horizontal Position

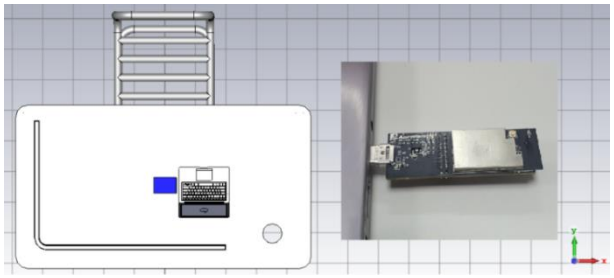

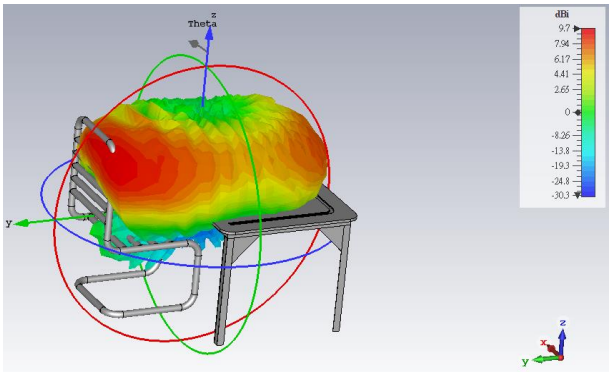


- Steel Desk & Chair + Horizontal Position + Close to Desk Edge

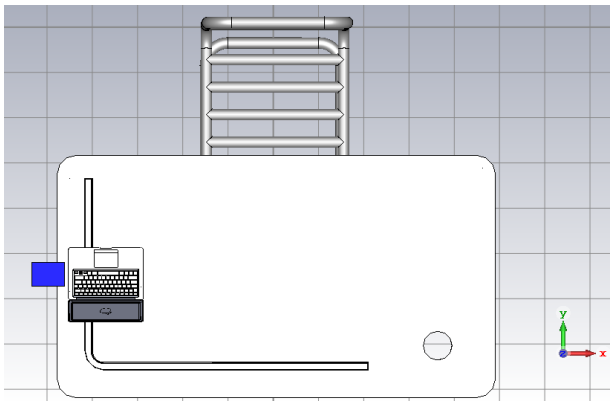

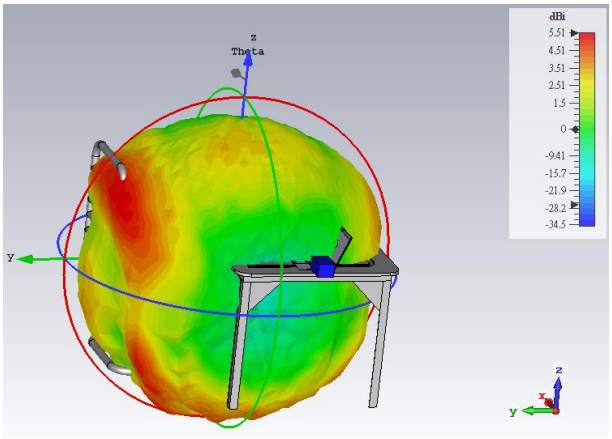




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

- Wood Desk & Chair + Vertical Position

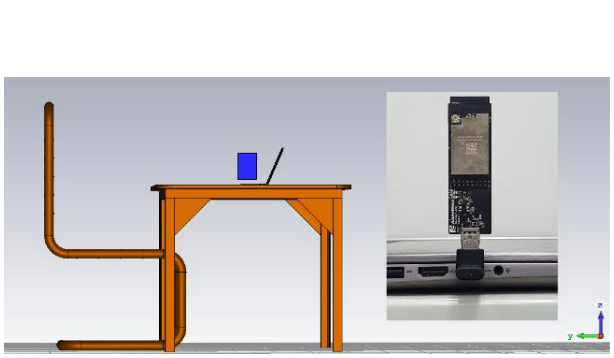

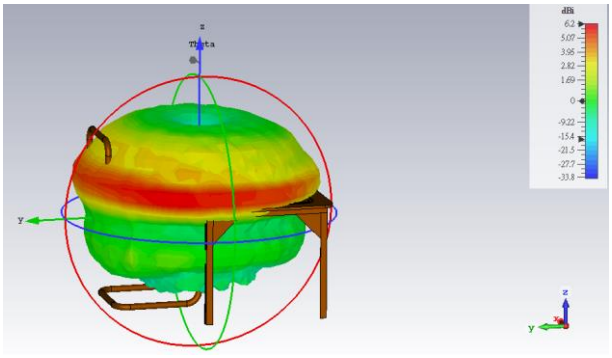

- Wood Desk & Chair + Vertical Position + Close to Desk Edge

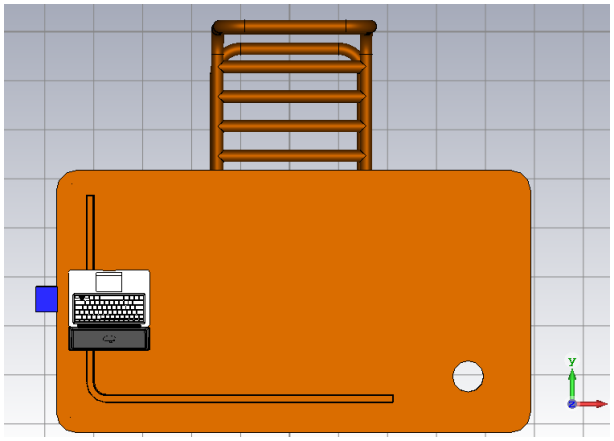

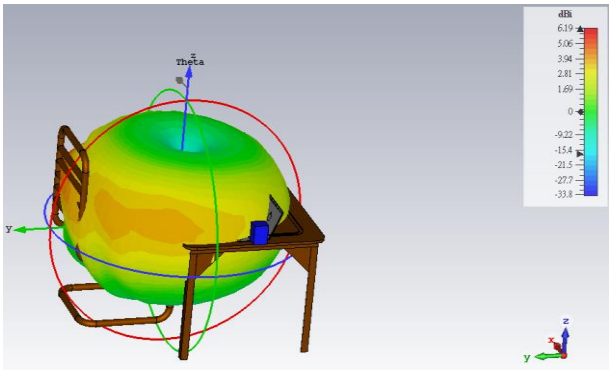



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# 3. AWS Command Example

Please find the command details in **AWS CONNECTOR AT Command Set**.

Below are commands for the demo:

1. Turn on Wi-Fi module: **AT+WIFI_On**
2. Retrieve the Wi-Fi AP | Station Mode: **AT+WIFI_GetMode**
3. Perform a Wi-Fi network scan: **AT+WIFI_Scan**
4. Set and store the Wi-Fi AP information when AW-CU427-USB in Station Mode:

   **AT+WIFI_SetAP=SSID,password,security type**
   **SSID**: SSID of AP (case sensitive)
   **password**: password for AP (case sensitive)
   **security type**: OPEN | WEP | WPA | WPA2

5. Connect to the AP: **AT+WIFI_Connect**
6. Define and store Thing-specific configuration:

   **AT+THING_Set=client ID,endpoint,client certificate,client private key**
   **client ID:** Thing name(Client ID)
   **endpoint:** AWS IoT endpoint URL
   **client certificate:** Certificate for this Thing
   **client private key:** Private key for this Thing

7. Connect the client to MQTT broker: **AT+MQTT_Connect**
8. Subscribe to and save MQTT topic: **AT+MQTT_Subscribe**=<topic>,<qos>
9. Publish to MQTT topic:

   **AT+MQTT_Publish=topic,message,qos**
   **topic**: Topic to publish to
   **message**: Message to publish
   **qos**: 0 | 1

## 3.1 Getting Started with AWS IoT Core

Step 0**:** The below link is a documents of how to setup AWS IOT, you can refer to it for full AWS IOT knowledge.

https://docs.aws.amazon.com/iot/latest/developerguide/iot-gs.html

But, if you want to setup AzureWave AWS Connector, you would just refer to the following steps.



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

Step 1: Create AWS Account, Create an IAM user.

Please refer to the below link to setup AWS Account and IAM user.

https://docs.aws.amazon.com/iot/latest/developerguide/setting-up.html

If you have created an IAM user, please refer to the following setting to connect these two policies (AmazonFreeRTOSFullAccess, AWSIoTFullAccess) to your IAM.

https://docs.aws.amazon.com/freertos/latest/userguide/freertos-account-and-permissions.html

Step 2: Create a thing.

A thing represents a specific device or instance that can communicate with AWS IOT.

Please refer to the following link to create a thing.

https://docs.aws.amazon.com/iot/latest/developerguide/create-aws-thing.html

Step 3: Register a device

This step will create certificate and private key. You can use certificate, private key, thing name and endpoint as **AT+THING_Set** command parameter. After this command executing, the four parameter will be provision to our connector. After provisioning, you can connect to AWS IOT with MQTT or SHADOW operation.

Please refer to the steps at the following link.

https://docs.aws.amazon.com/iot/latest/developerguide/register-device.html

After finishing the steps, please notice the following two actions:

- Download certificate and private key

In Create and activate a device certificate chapter, please download and keep the certificate and private key. Because they will be used when sending the **AT+THING_Set** command.



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

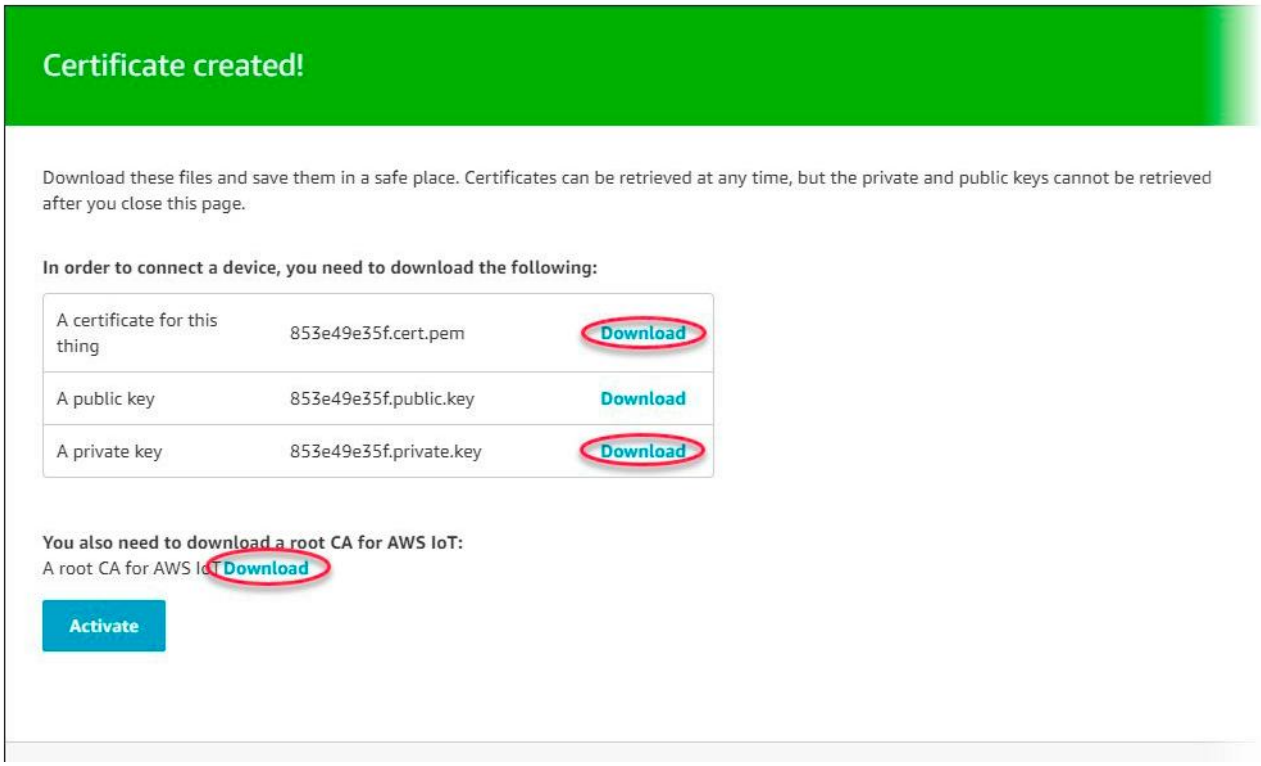
Certificate created!
Download these files and save them in a safe place. Certificates can be retrieved at any time, but the private and public keys cannot be retrieved after you close this page.
In order to connect a device, you need to download the following:
A certificate for this thing
853e49e35f.cert.pem
Download
A public key
853e49e35f.public.key
Download
A private key
853e49e35f.private.key
Download
You also need to download a root CA for AWS IoT:
A root CA for AWS IoT
Download
Activate

- Thing Name and Endpoint

These two data will also be used for **AT+THING_Set** command.

You can find out thing name in Manage > Things submenu, and endpoint in settings of AWS IOT Console at console.aws.amazon/iot.



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

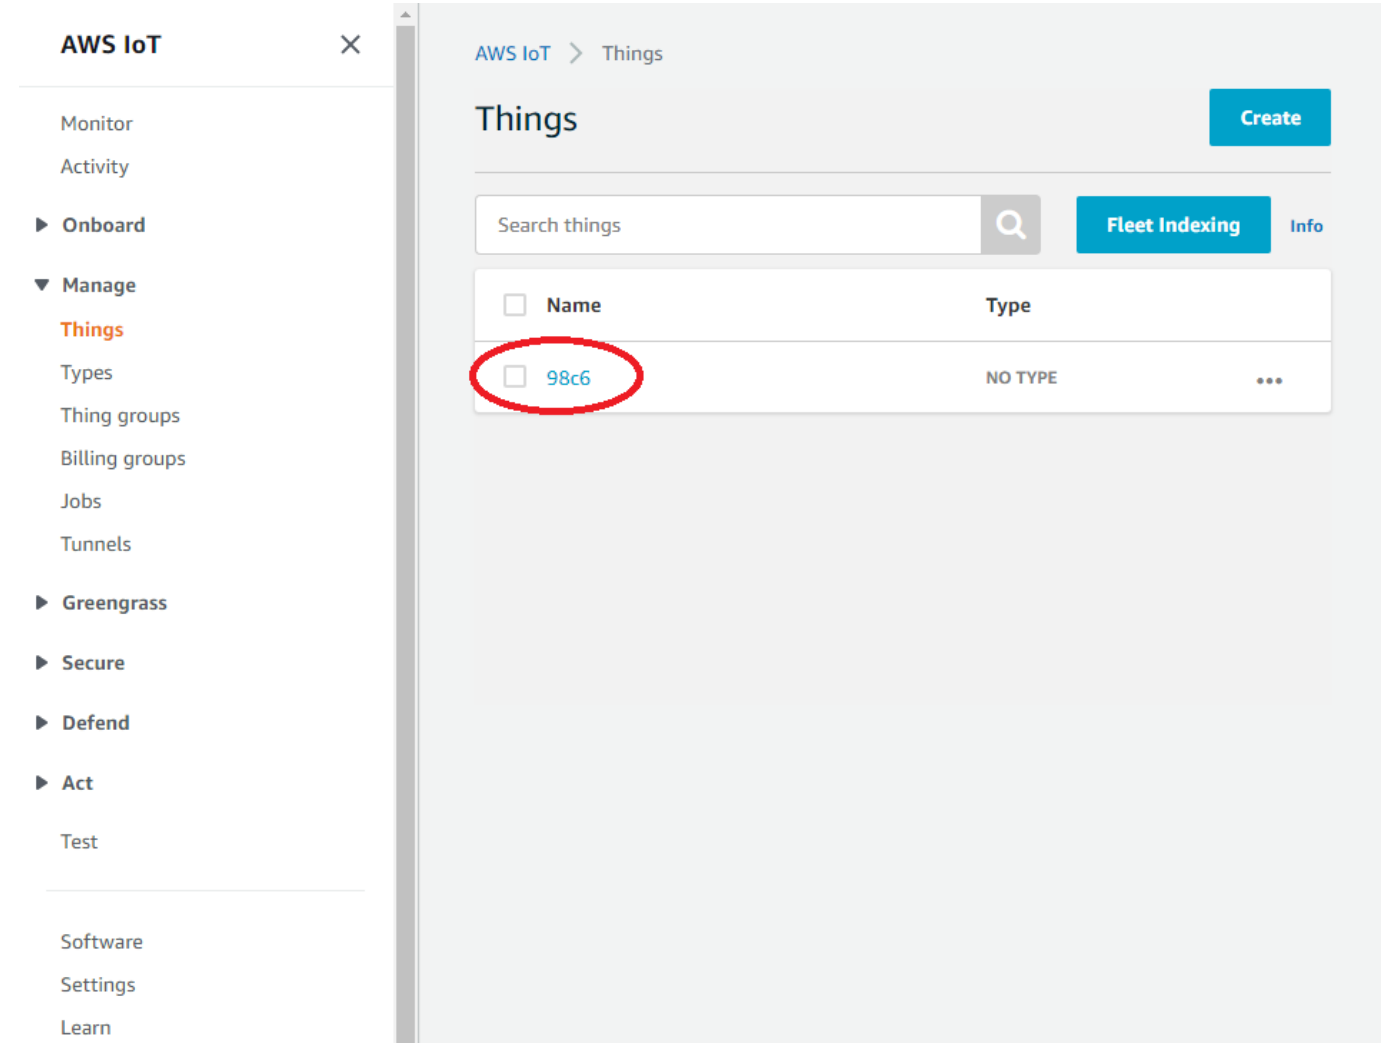


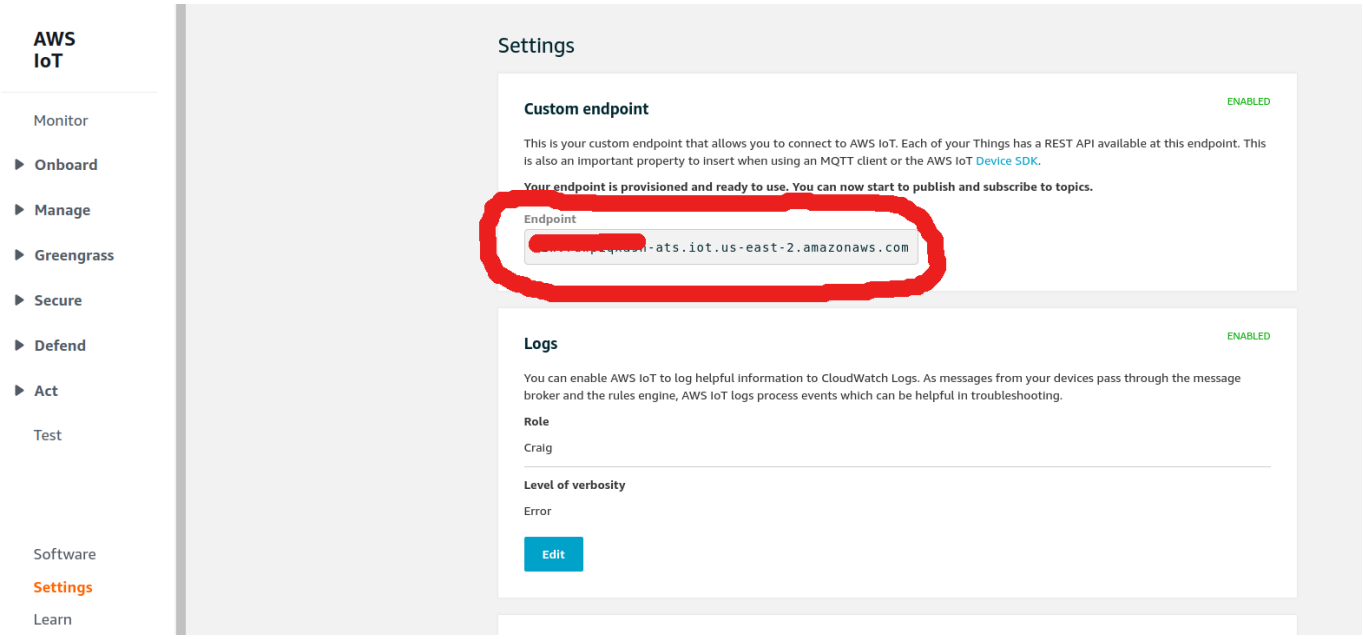
AWS IoT
Monitor
Onboard
Manage
Greengrass
Secure
Defend
Act
Test
Software
Settings
Learn
Settings
Custom endpoint
ENABLED
This is your custom endpoint that allows you to connect to AWS IoT. Each of your Things has a REST API available at this endpoint. This is also an important property to insert when using an MQTT client or the AWS IoT Device SDK.
Your endpoint is provisioned and ready to use. You can now start to publish and subscribe to topics.
Endpoint
-ats.iot.us-east-2.amazonaws.com
Logs
ENABLED
You can enable AWS IoT to log helpful information to CloudWatch Logs. As messages from your devices pass through the message broker and the rules engine, AWS IoT logs process events which can be helpful in troubleshooting.
Role
Craig
Level of verbosity
Error
Edit



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

## 3.2 Publish and Monitor MQTT message on the cloud

Step 0: Make sure the AP under test is connected to the internet using other Wi-Fi enabled devices. Assume the SSID, password and security type of the AP is MySSID, MyPassword, wpa2.

Step 1: Connect the AW-CU427-USB to the system (refer to 2. Hardware Setup) and turn off the wireless devices near the AW-CU427-USB (except for the device under test). Turn on the Wi-Fi module of the AW-CU427-USB using **AT+WIFI_On**

Step 2: Check if AW-CU427-USB is in station mode using **AT+WIFI_GetMode**

Step 3: Set and store information of the AP using **AT+WIFI_SetAP= MySSID,MyPassword,wpa2**

> **AT+WIFI_SetAP**=**SSID**,**password,security type**
> **SSID**: SSID of AP (case sensitive)
> **password**: password for AP (case sensitive)
> **security type**: OPEN | WEP | WPA | WPA2

Step 4: Connect to the AP: **AT+WIFI_Connect**

Step 5**:** Define and store Thing-specific configuration using **AT+THING_Set** command

> **AT+THING_Set=client ID,endpoint,client certificate,client private key**
> **client ID:** Thing name(Client ID)
> **endpoint:** AWS IoT endpoint URL
> **client certificate:** Certificate for this Thing (downloaded in 3.1 step 3)
> **client private key:** Private key for this Thing (downloaded in 3.1 step 3)

You should create command as format below:

**AT+THING_Set=98c6, a3qjEXAMPLEffp-ats.iot.us-east-1.amazonaws.com, -----BEGIN CERTIFICATE-----\n…base64 data…\n-----END CERTIFICATE-----\n, -----BEGIN RSA PRIVATE KEY-----\n…base64 data…\n-----END RSA PRIVATE KEY-----\n**

> Note: a3qjEXAMPLEffp is just an example endpoint, your endpoint URL should replace it. Please follow the instructions to find the endpoint.

- Navigate to the AWS IoT console
- Choose Settings in the navigation pane
- The endpoint can be found under Custom endpoint



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

Step 6: Connect the client to MQTT broker: **AT+MQTT_Connect**.

Step 7: Subscribe to and save MQTT topic using **AT+MQTT_Subscribe=iotdemo/1,0**

Step 8: Publish to MQTT topic using **AT+MQTT_Publish=iotdemo/1, hello, 0**

**AT+MQTT_Publish=topic,message,qos**
**topic:** Topic to publish to
**message:** Message to publish
**qos:** 0 | 1

Step 9: Use the MQTT client in the AWS IoT console to monitor the messages that device sends to the AWS Cloud.

Sign in to the AWS IoT console.

https://console.aws.amazon.com/iotv2/

In the navigation pane, choose **Test** to open the MQTT client.

In **Subscription topic**, enter **iotdemo/#**, and then choose **Subscribe to topic**.

You should see the message send from device as like below.

The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# 4. Block Diagram and Schematic

## 4.1 Block Diagram for AW-CU427-USB

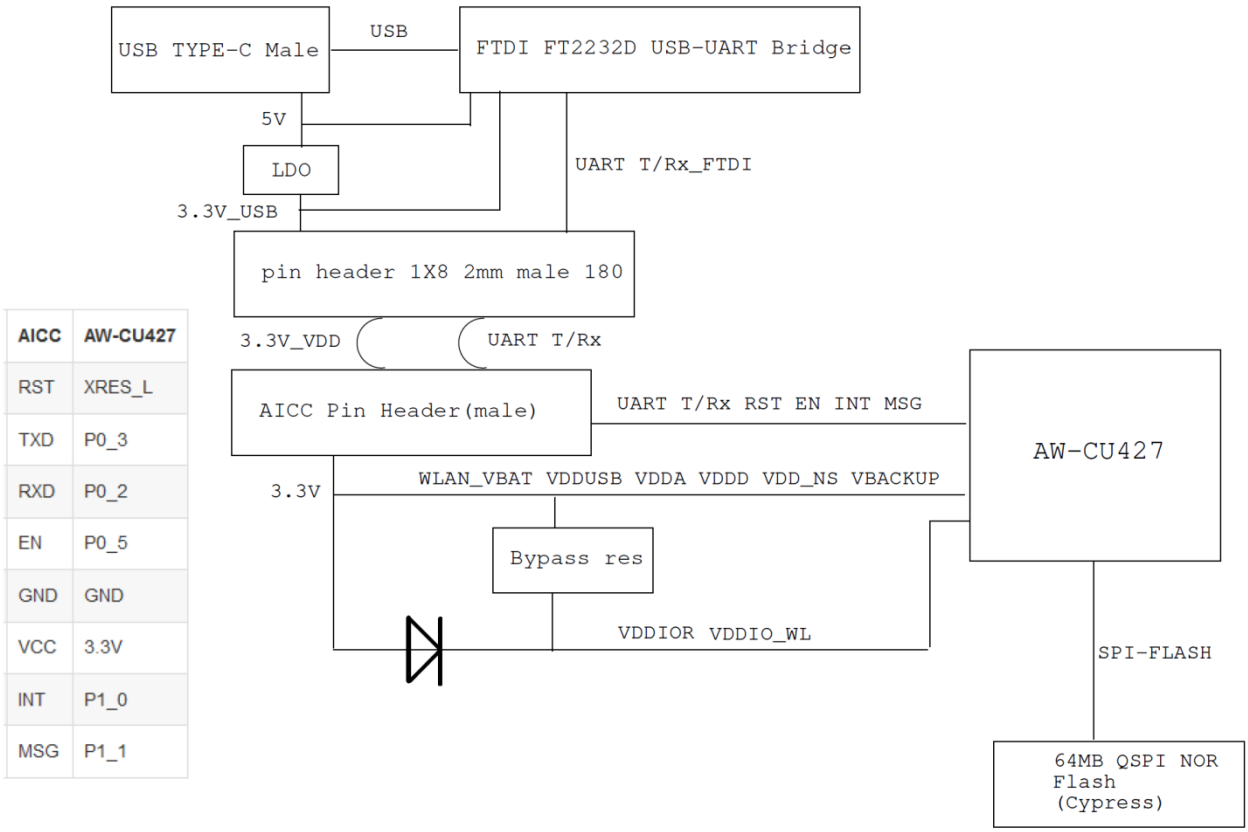


| AICC | AW-CU427 |
|---|---|
| RST | XRES_L |
| TXD | P0_3 |
| RXD | P0_2 |
| EN | P0_5 |
| GND | GND |
| VCC | 3.3V |
| INT | P1_0 |
| MSG | P1_1 |

Pin Name (J60) is also shown on the bottom of PCBA

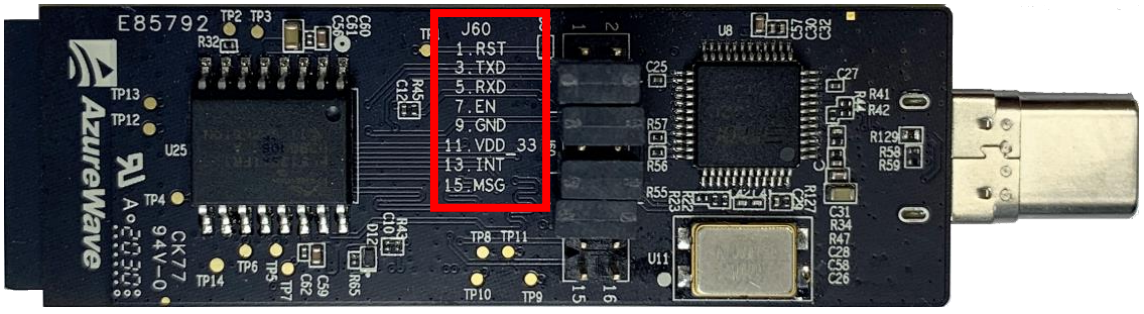




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

## 4.2 Schematics for AW-CU427-USB

FTDI Bridge （USB to UART/JTAG)

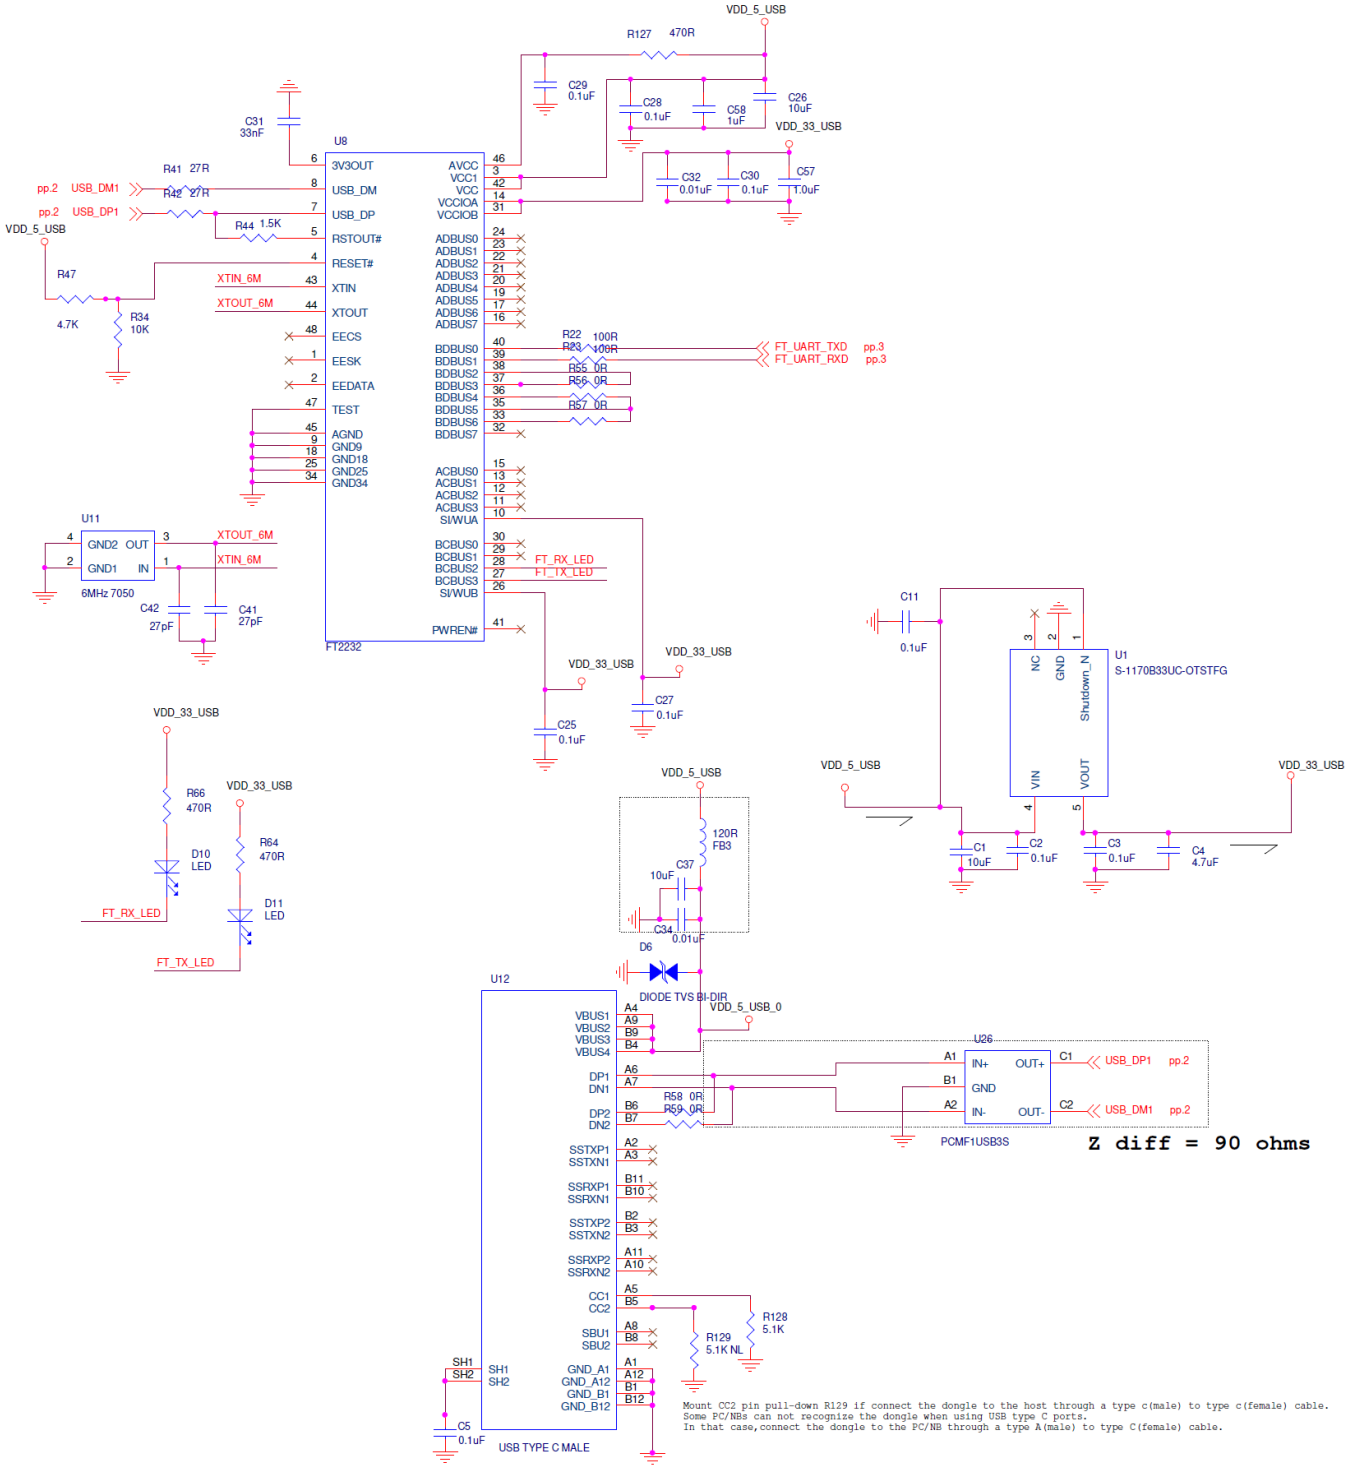




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

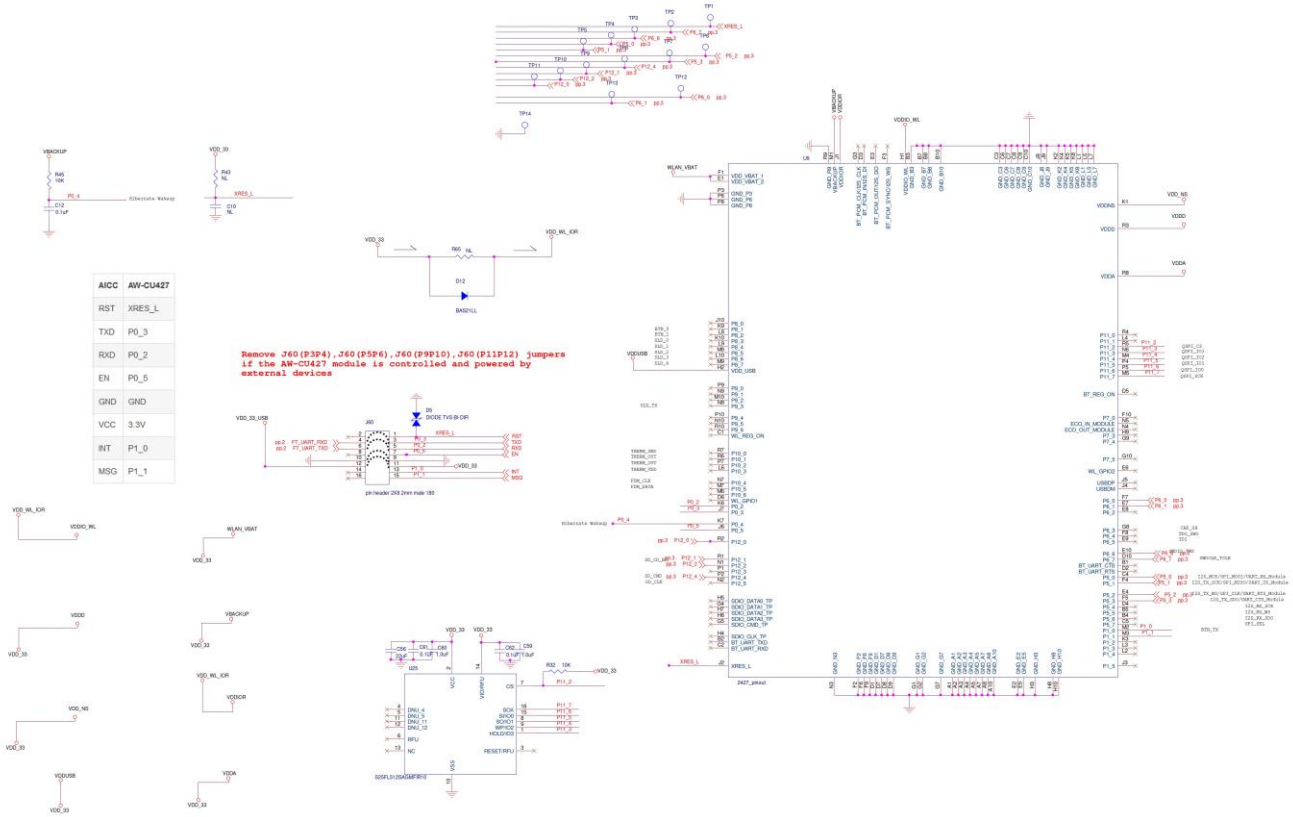




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# 5. Additional Information

The AW-CU427-USB is designed for **Engineering Evaluation Purpose** Only as opposed to an end product. Thus, it may not comply with directives such as WEEE, CE and FCC. The dongle is not completely enclosed with a shielding case. User must take whatever measures to prevent ESD and minimize interference generated by the dongle. **For preventing any damage on this dongle, please plug it into USB female port horizontally**.



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

# Appendix

### AW-CU427-USB work with Arduino Uno

- Remove all the jumpers (2mm pitch) on the dongle before mating it with the Arduino Uno through the ARDUINO UNO ADAPTOR. **The digital logic level & power supply input of the dongle are 3.3V**. DO NOT directly connect the dongle to the Arduino Uno.

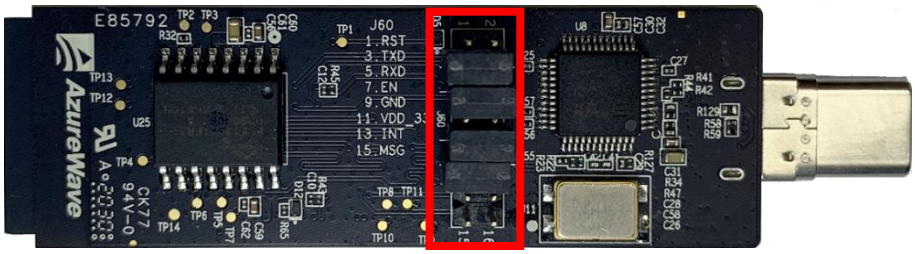


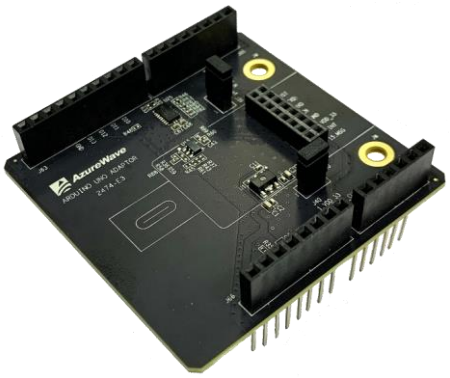

**ARDUINO UNO ADAPTOR**

- AW-CU427-USB connected to Arduino Uno through the ARDUINO UNO ADAPTOR

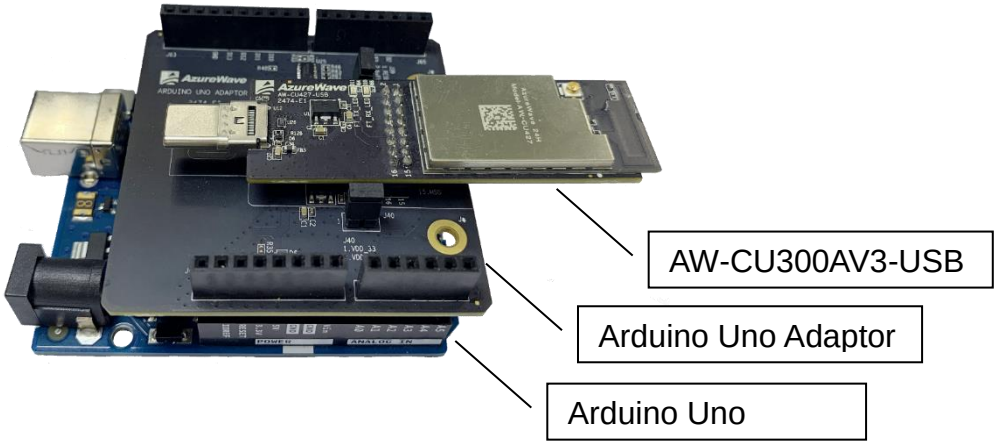




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

- Block Diagram for Arduino Uno Adaptor

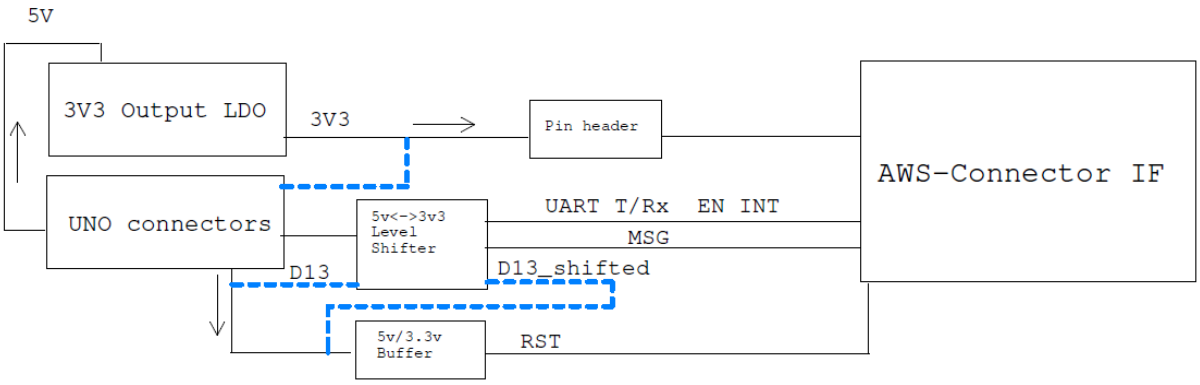


- Schematics for Arduino Uno Adaptor

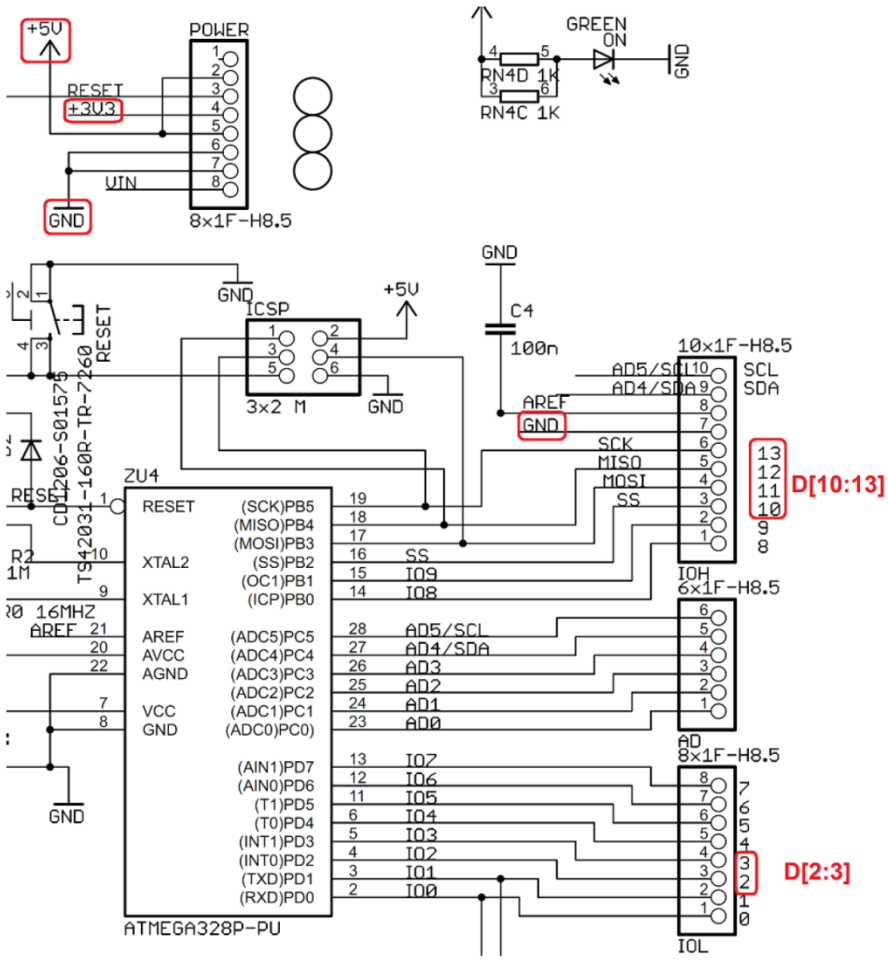


| ArduinoUNO | AICC |
|---|---|
| D13 | RST |
| D12 | TXD |
| D11 | RXD |
| D10 | EN |
| GND | GND |
| 5V | VCC |
| D2 | INT |
| D3 | MSG |



The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.

| ArduinoUNO | AICC |
|---|---|
| D13 | RST |
| D12 | TXD |
| D11 | RXD |
| D10 | EN |
| GND | GND |
| 5V | VCC |
| D2 | INT |
| D3 | MSG |

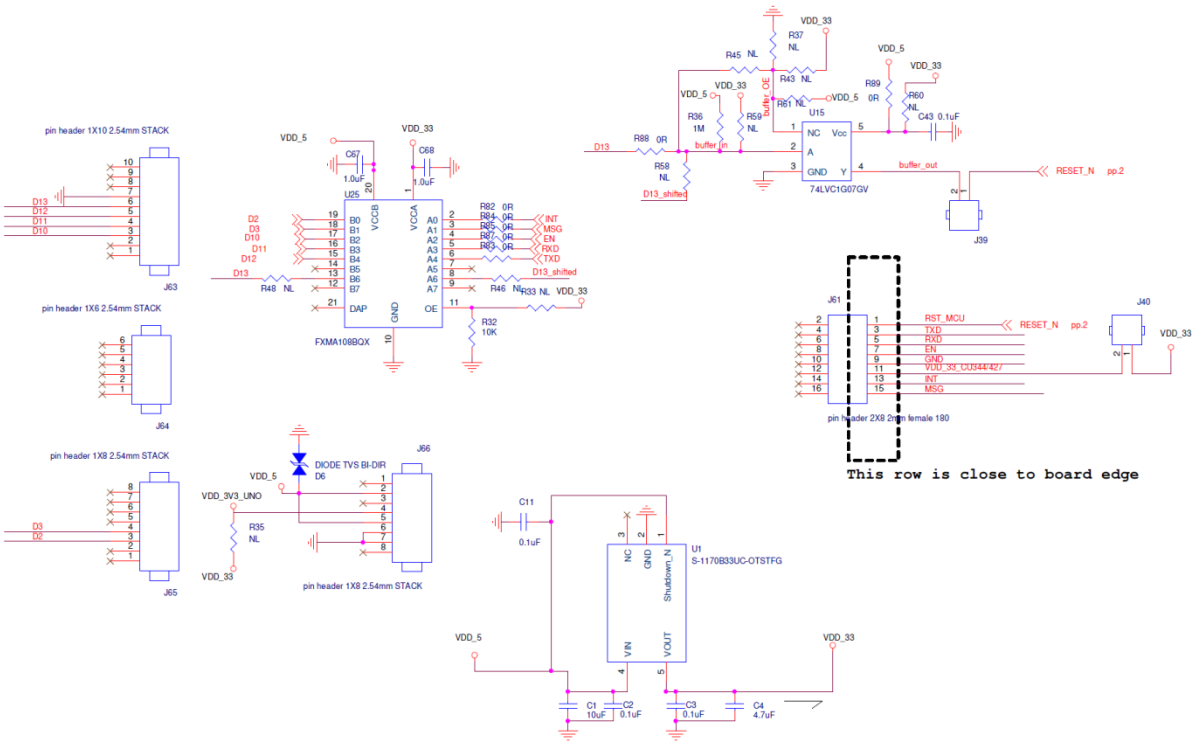




The information contained herein is the exclusive property of AzureWave and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of AzureWave.